

Integration Volvo Garo AC 43

- Configuration of the charging station

Configuration of the charging station

Configuration in the web browser.

Enter the IP address in the browser with /operator at the end.

Example:

Bildschirmfoto 2024-11-12 um 13.39.52.png

Enter the default user name
and password User name: operator
Password: 463joSefine6011

Then select the Operator tab on the left and configure the settings as shown in the image.

Bildschirmfoto 2024-11-06 um 16.42.32.png

OCPP link: `wss://ocpp.eponet.io/1.6J/24kp/serial`

The whitelists are always active by default and must be deactivated manually.

Now set the "Modbus TCP Server" to On.

Bildschirmfoto 2024-11-06 um 16.43.19.png