

Connecting a Y13R RFID reader to a USR

Here is the connection diagram for an installation.

The Y13R RFID readers (red) are connected to a USR.

Bildschirmfoto 2025-05-19 um 15.05.40.png

The Y13R readers can also be daisy-chained to connect several in series.

The USR must be configured as follows.

1. Connect to the USR via the IP address.
2. Log in to the USR with the username "admin" and the password "admin".
3. Now configure the USR as shown in the images below for all ports to which you have connected RFID readers.

Bildschirmfoto 2025-05-09 um 13.50.14.png

Bildschirmfoto 2025-05-09 um 13.50.36.png

The configuration of the USR is now complete.

Revision #9

Created 19 May 2025 13:08:02 by Lukas Haarmann

Updated 5 June 2025 08:52:04 by David Brouwer